



1. Factory Bracket.

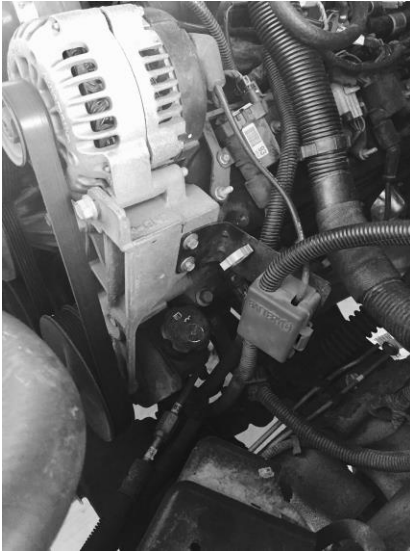

2. **Catch Can Bracket** is installed using **Factory Bolts**.

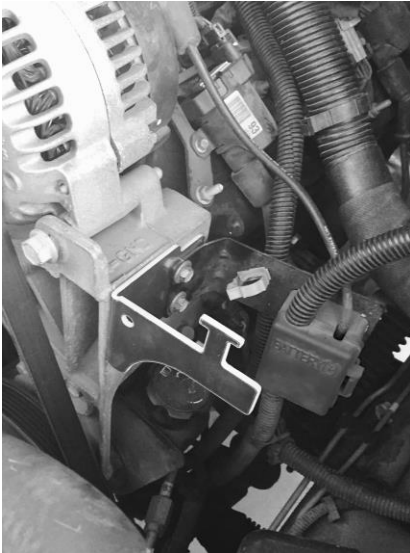

3. Open **Clamp** to its maximum size.



4. Slide **Catch** into place.
Make sure not to scratch the **Can**.
Tighten **Clamp**.



5. Install one end of **Supplied Vacuum Hose** into the **Passenger Valve Cover Vent Tube**.
On the other end install the **Supplied Air Filter**.
You'll need roughly 12" of **Hose**.
Position **Filter** away from hot and moving parts.



6. Install **One Way Check Valve**.
Air needs to flow towards the **Intake Manifold**.



7. The **Catch Can** has 2 **Fittings**.
The one **Fitting** with the silver dimple goes to the **Check Valve** at your **Intake**.
The other **Fitting** is routed to your **Driver Side Valve Cover Stock PCV Location**.

